

Zebra fingerskanner RS5XXX /6XXX


De mest brukte strekkodene

1. Blåtann parring



HID Bluetooth Classic

2. Autoenter

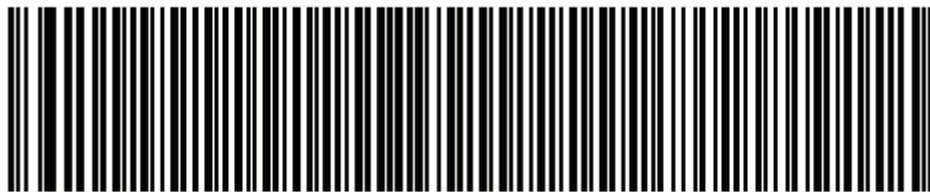

Add Enter Key (Carriage Return/Line Feed)

3. Tidsforsinkelse på strekkode lesing



***No Delay (0 msec)**



Medium Delay (20 msec)



Long Delay (40 msec)

4. Ved å skanne denne endres IKKE – til + ved skanning



5. Skanner volum

Beeper Tone

Parameter # 145 (SSI # 91h)

To select a beeper tone, scan one of the following barcodes.



Off
(3)



Low Tone
(2)




Medium Tone
(1)

6. Angre og gjenopprette

To correct an error or change a selection, scan the barcode below.



Cancel

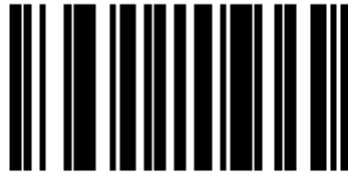

Set Factory Defaults

onlog
WWW.ONLOG.NO